INTERFACE
Lode Ergometer – Progetti MyStress

STEP I **Setting up the hardware**

1. For controlling the ergometer by the MyStress ECG system you need a RS232 cable (part no. 930911), the lay-out of the cable is as follows:

Straight RS232 cable 930911		
D-con 9 pin female		D-con 9 pin male
2 RxD	----------	2 TxD
3 TxD	----------	3 TxD
5 GND	----------	5 GND

2. Connect the RS232 cable to the ergometer *(see picture 1).*
3. Connect the RS232 cable to the MyStress system *(see picture 2).*

STEP II **Setting up the ergometer**

4. Switch on the ergometer

   The Corival ergometer is default shipped with the LODE RS232 communication protocol. It should be set to the Lode RS232 protocol
   You can change the RS232 by following the procedure below:
   - Switch on the ergometer and press enter.
   - You will be in the "MAINMENU"
   - Select, by using the up/down keys, the menu "SYSTEM PARAMETER" and press enter
   - Select, by using the up/down keys, the menu "SETTINGS" and press enter
   - Select, by using the up/down keys, the menu "RS232 PROTOCOL" and press enter
   - Select, by using the up/down keys, the "Lode RS232 protocol" and press enter.
   - Save the selected RS232 protocol or restore the default RS232 protocol, which is also the LODE PROTOCOL.
   - Switch off the ergometer.

5. For controlling the ergometer by the MyStress system the ergometer should be set in "Terminal" mode. The "Terminal "mode should be selected as follows. After switching the ergometer on press enter, and select "Terminal" and press enter again

   NOTE: You can also start the ergometer up in "Terminal" mode every time you switch on the ergometer, by using the default start menu. To set up the ergometer for starting up in "Terminal" mode proceed as follows:
   - Switch on the ergometer and press enter.
   - You will be in the "MAINMENU"
   - Select, by using the up/down keys, the menu "SYSTEM PARAMETER" and press enter

- Select, by using the up/down keys, the menu "SETTINGS" and press enter
- Press enter to confirm the menu “DEFAULTSTARTMENU” and press enter

If you switch off the ergometer it will start-up in the "Terminal" mode every time when the ergometer is switched on again.

6. The Lode ergometer is now ready for external control

STEP III	**Setting up the MyStress System**

Start the MyStress software and select *Setup*

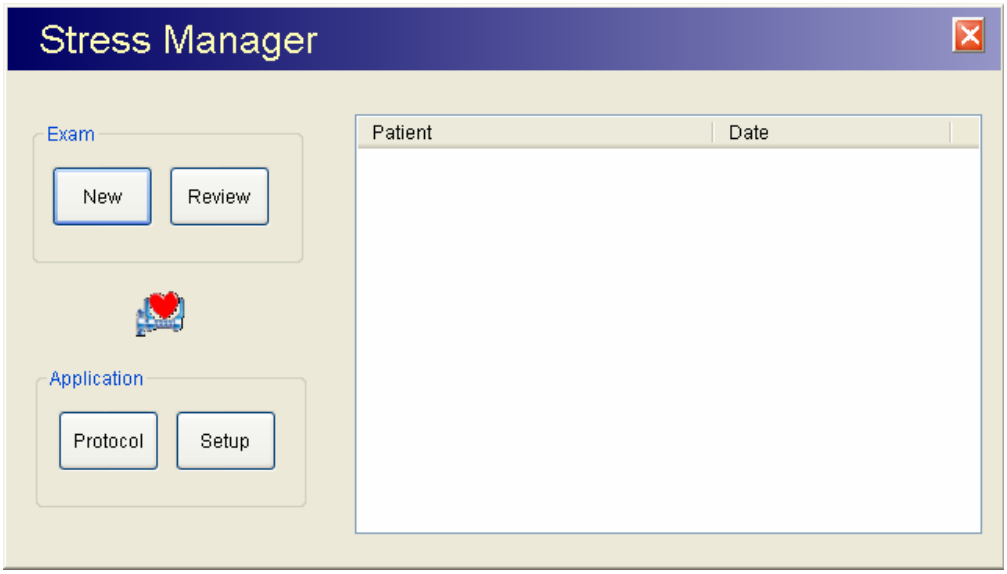

INTERFACE

Lode Ergometer – Progetti MyStress

The following screen will be displayed, select as Bike the “LODE BIKE” and select the COM Port on which you have connected the ergometer. Press “OK”.

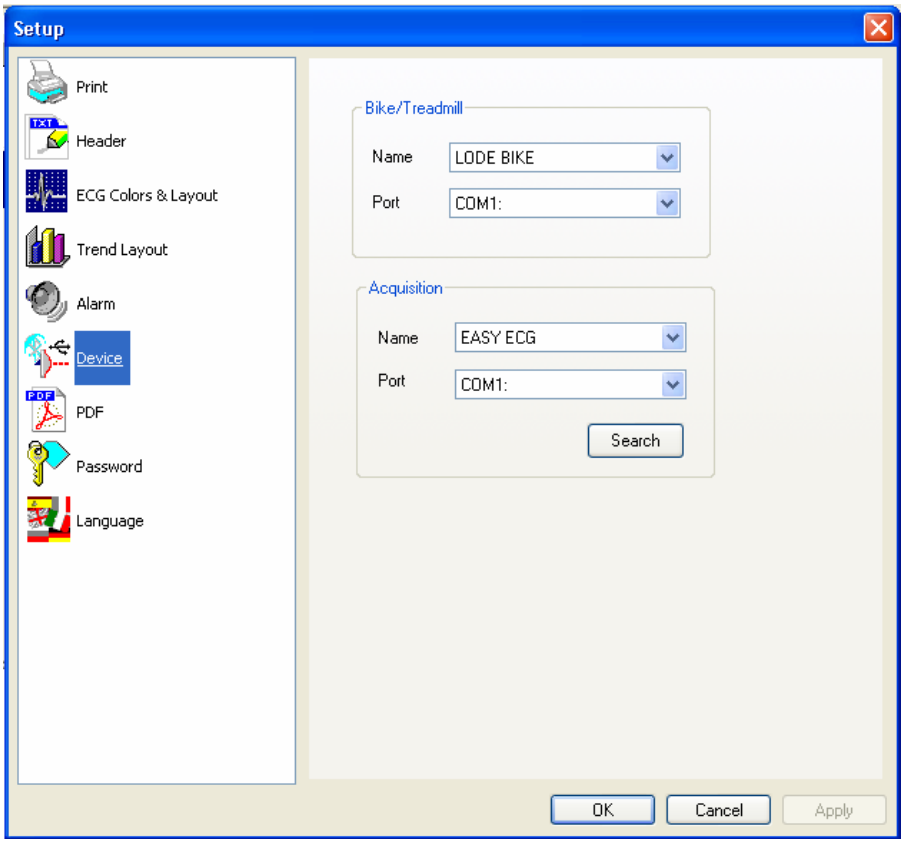

Restart the ergometer and ECG device and then your system is ready to be used.

INTERFACE

Lode Ergometer – Progetti MyStress

Pictures.

Picture 1

Picture 2

Remarks:

- The installation procedures of the Lode ergometers Corival, Angio and Excalibur (Sport) are all the same. The connection of the cables may be on slightly different places.

For questions and comments, you can contact the Lode service department by e-mail at service@lode.nl or by telephone at +31 50 5712811.

Lode B.V.
Zernikepark 16
9747 AN Groningen
The Netherlands

Tel.: 31(0)50 5712811
Fax: 31(0)50 5716746